



Now density/concentration measurement is SMART

Density Meter DIMF Series: Continuous Quality Assurance with HART® Communication

Designed for the process:

- direct measurement of density, reference density, or concentration
- robust construction
- high accuracy

EU declaration of

conformity

- 2-wire technique
- low installation costs
- status message for preventive maintenance





The DIMF series density/concentration meter is based on the oscillating element principle. The fluid to be measured flows through the oscillating element (a tuning fork for Type 1.3, an oscillating tube for type 2.0) that is excited electromagnetically and will oscillate at its natural frequency. Changes in the density of the fluid lead to changes in the natural frequency. These frequency changes will be picked up by the electronic transducer and converted into a signal proportional to density or concentration. The measured variable is available as a 4-20 mA output signal and can be shown on the on-site display. Major applications are process control and quality monitoring of fluids in all areas of industry. The device can also be used for density mass flow conversion for custody transfer in connection with the







corresponding volumetric meters and flow computers.

Technical data Measured value (*) <± 0.0002 g/cm3 (Type DIMF 2.0) <± 0.0001 g/cm3 (Type DIMF 1.3) Repeatability 0.00005 g/cm3 Fluid temperature -40°C to +150°C (-40°C to +210°C on request) -10°C to +58°C (compact version) Ambient temperature separate version on request For type DIMF 1.3: female thread G1/4" ISO 228 or **Process connection** flanges DN 10/PN 40 (or 1/2" 150/300 RF) For type DIMF 2.0: Swagelock fittings, flanges DN 15 or DN 25 acc. to pressure rating PN 40 (or Class 150/300 RF) in acc. with DIN 2501 (or ANSI B 16.5) Other pressure ratings and various food connections are available on request Electrical connection Power supply 14-30 V DC 2-wire technique, 4-20 mA, HART® Material Wetted parts: special alloy of NiFeCr (Type DIMF 1.3), stainless steel 1.4571, Hastelloy C4, Tantalum, Inconel 600, Monel 400, other materials on request (Type DIMF 2.0) Degree of protection IP 67 (electronics housing) Safety class EEx ia IIC T4, in acc. with CENELEC, EExd

and approvals to CSA und FM in preparation

In acc. with EMC directive 89/336/EWG,

92/3/EWG, 93/68 EWG, EN 50081-1,

EN 50082-2 and NAMUR NE 21

Measuring ranges

DIMF	Type 1.3	Type 2.0
Density range	0 to 5 g/cm ³	0 to 5 g/cm ³
Operating flow rate maximum value	0 to 10 l/min	0 to 50 l/min
Operating flow rate recommended value approx.	0,5 to 1 l/min	2 to 5 l/min
Especially suitable for	Non-corrosive liquids	Non-corrosive and corrosive liquids
Version for fiscal metering	available (**)	Not available


- (*) at reference conditions
- (**) with pre-amplifier type PV24


Advantages of the DIMF Density Meter

... based on the proven oscillating element principle

- Direct measurement of density, reference density, or concentraion
- Long service life and high reliability due to the very robust construction
- · Very high long-term stability
- Highest accuracy/repeatability
- Maintenance-free
- Measuring element suitable for CIP and SIP, self-draining (Type 2.0)
- Simple installation
- Independent of mounting position
- Resistant to vibration, pressure changes, pulsations, flow-rate changes and product viscosity
- No dead zones, no gaskets

Main dimensions

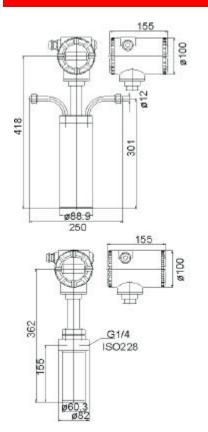


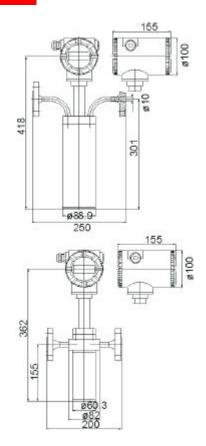

... combined with modern electronics suitable for communication

- 2-wire technique
- 4-20 mA output
- Local display
- Various units such as kg/m³, Ma%, Vol%, Brix, Bé or API
- User-friendly and easy to handle due to the SensorPort display and user interface
- HART protocol (Profibus PA in preparation)
- Hand-held terminal available
- Status messages for preventive maintenance

Connection diagram

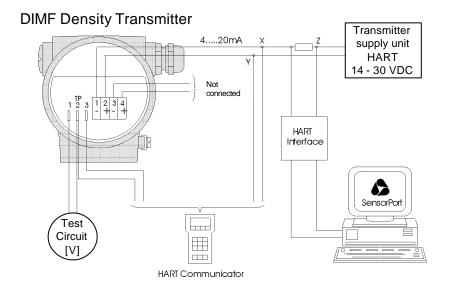

Subject to changes without notice

01.03

Bopp & Reuther Messtechnik GmbH

Postfach 1709 67327 Speyer, Germany Am Neuen Rheinhafen 4 67346 Speyer, Germany Phone: +49 (6232) 657-0 Fax: +49 (6232) 657-505

Internet: www.burhm.de eMail: Info@burhm.de

PI 413.2e